




carbon by design

2613 Temple Heights Drive • Unit E • Oceanside • CA • 92056

FUSE BOX INSTALLATION

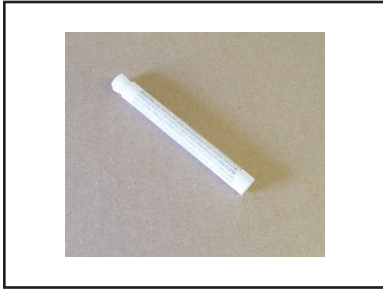

Adhesive Promoter:

With all 3M VHB Taped Products we supply an ampule of adhesion promoter. This tube of adhesion promoter must be used anywhere the tape will come into contact with. To use the ampule crack it in the middle, you will hear the noise of breaking glass. Quickly wipe the ampule on all of the surfaces until it goes dry. On the fuse box cover just peel the tape and place it on the OEM fuse box.



carbon by design

2613 Temple Heights Drive • Unit E • Oceanside • CA • 92056

FUSE BOX INSTALLATION



Adhesive Promoter:

With all 3M VHB Taped Products we supply an ampule of adhesion promoter. This tube of adhesion promoter must be used anywhere the tape will come into contact with. To use the ampule crack it in the middle, you will hear the noise of breaking glass. Quickly wipe the ampule on all of the surfaces until it goes dry. On the fuse box cover just peel the tape and place it on the OEM fuse box.



carbon by design

2613 Temple Heights Drive • Unit E • Oceanside • CA • 92056

FUSE BOX INSTALLATION



Adhesive Promoter:

With all 3M VHB Taped Products we supply an ampule of adhesion promoter. This tube of adhesion promoter must be used anywhere the tape will come into contact with. To use the ampule crack it in the middle, you will hear the noise of breaking glass. Quickly wipe the ampule on all of the surfaces until it goes dry. On the fuse box cover just peel the tape and place it on the OEM fuse box.